

SECTION **HRN**
HORN

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

CONTENTS

COMPONENT DIAGNOSIS	2	Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	5
HORN	2	ON-VEHICLE REPAIR	6
Wiring Diagram - HORN -	2	HORN	6
PRECAUTION	5	Exploded View	6
PRECAUTIONS	5	Removal and Installation	6

www.gtr-store.eu

HRN

HORN


< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

HORN

Wiring Diagram - HORN -

INFOID:000000004168103

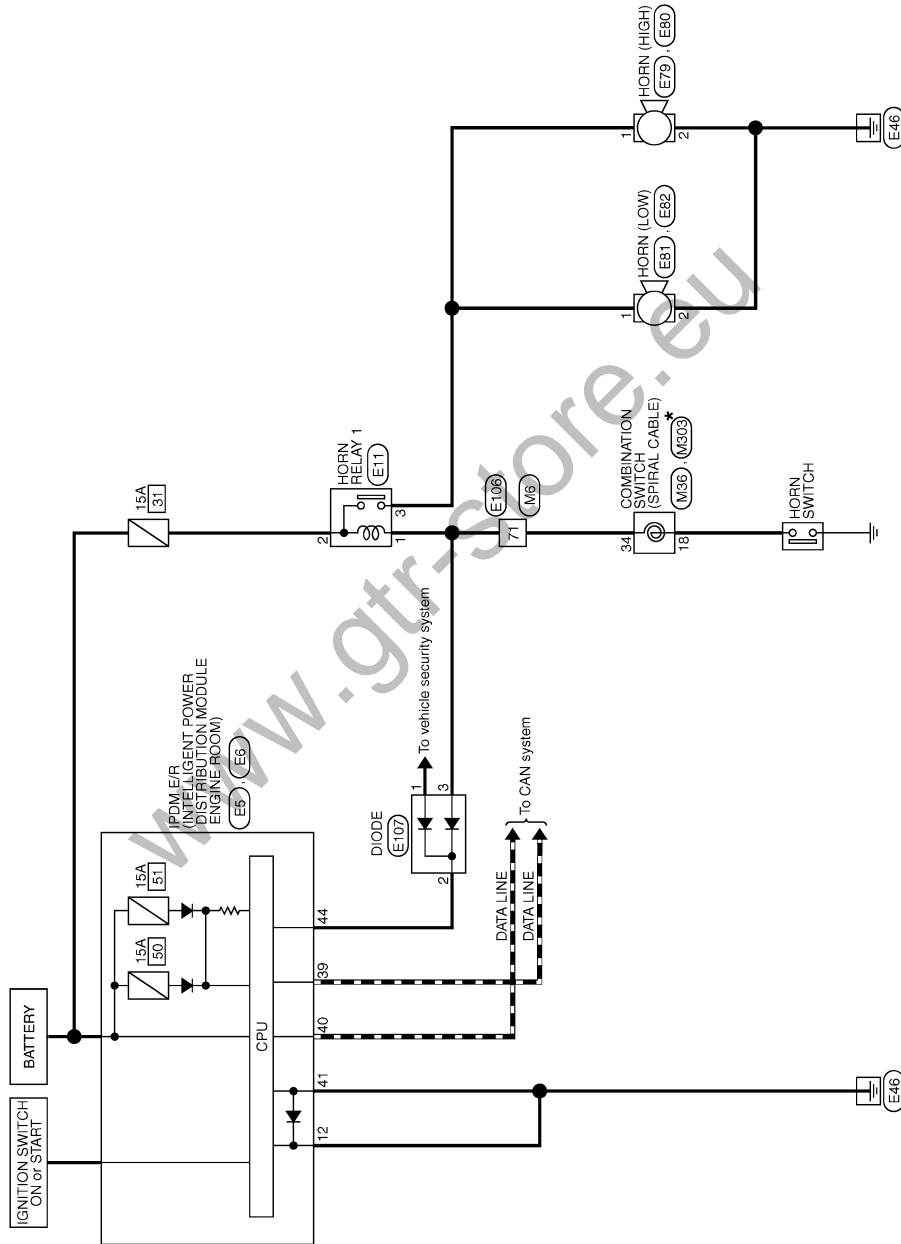

*: This connector is not shown in "Harness Layout".

HORN

2008/03/14


JCL/IA17216B

HORN

< COMPONENT DIAGNOSIS >

HORN

Connector No.	E5
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-MA-IV

 


Terminal No.	Color of Wire	Signal Name [Specification]
12	B/W	-

Connector No.	E6
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH68FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B/Y	-
44	W	-

Connector No.	E11
Connector Name	HORN RELAY 1
Connector Type	2438L-7990A

 

Terminal No.	Color of Wire	Signal Name [Specification]
1	LG	-
2	P	-
3	G	-

Connector No.	E19
Connector Name	HORN (HIGH)
Connector Type	P01FB-A




Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-

Connector No.	E60
Connector Name	HORN (HIGH)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-

Connector No.	E81
Connector Name	HORN (LOW)
Connector Type	P01FB-A

 


Terminal No.	Color of Wire	Signal Name [Specification]
1	G	-

Connector No.	E82
Connector Name	HORN (LOW)
Connector Type	P01FB-A



Terminal No.	Color of Wire	Signal Name [Specification]
2	B	-

Connector No.	E106
Connector Name	WIRE TO WIRE
Connector Type	TH68FW-CS16-7M4

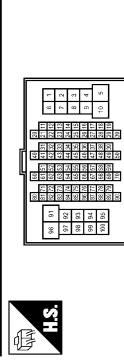



Terminal No.	Color of Wire	Signal Name [Specification]
71	LG	-

JCLWA17226B

HORN

< COMPONENT DIAGNOSIS >

Connector No.	Connector Name	Connector Type	Terminal No.	Color of Wire	Signal Name [Specification]
E107	DIODE 24335-09803		1	LG	
			2	W	
			3	LG	
M6	WIRE TO WIRE TH80MW-CS/G-TM4		7L	W	
M36	COMBINATION SWITCH (SPIRAL CABLE) TK08FGY-TV		34	W	
M303	COMBINATION SWITCH (SPIRAL CABLE) TK08FGY		18	-	

  

JCLWA1723GB

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003854309

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.

WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

www.gtr-store.eu

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

HRN

HORN


< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

HORN

Exploded View

INFOID:000000003854316

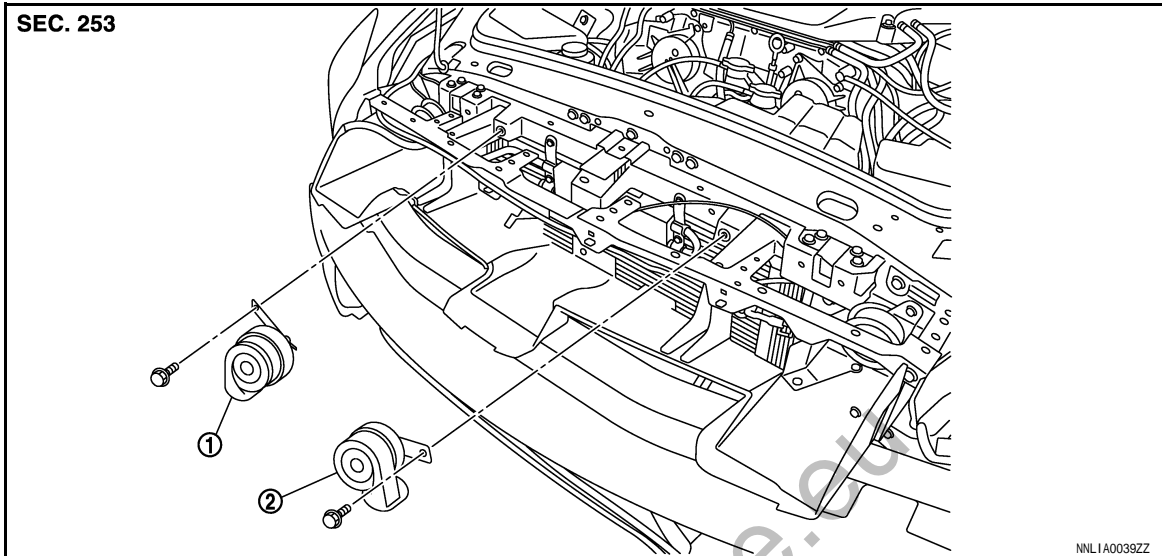

1. Horn (HIGH)

2. Horn (LOW)

Removal and Installation

INFOID:000000003854311

REMOVAL

1. Remove the radiator cover.
2. Disconnect the horn (LOW/HIGH) connector.
3. Remove the horn mounting bolt, and remove the horn (LOW/HIGH) from the vehicle.

INSTALLATION

Install in the reverse order of removal.